

Part #11232.75, 11232.76

460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Rugged Ridge Rear LED Cube Mount, RH or LH, JL



Components for 11232.75, LH (passenger side)

1.	Upper Light Bracket	3.	Carriage Bolts
2.	Lower Light Bracket	4.	Serrated Flange Nuts



Components for 11232.76, RH (driver side)

1.	Upper Light Bracket 1	3.	Carriage Bolts 2
2.	Lower Light Bracket1	4.	Serrated Flange Nuts2

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649

FOR WARRANTY OR TECH CONCERNS EMAIL: webmaster@omixsupport.com

ATTN: STATE OF CALIFORNIA CONSUMERS

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.




Part #11232.75, 11232.76

460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Rugged Ridge Rear LED Cube Mount, RH or LH, JL

1. First move to underneath your Jeep at the rear bumper. Remove the two bumper bolts located on the side of the frame rail. Now install the lower light bracket to this location and use the OE bolts through the bracket back to the frame-rail.

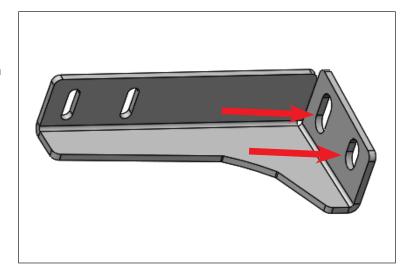

2. Now feed the upper bracket between the bumper and body. Once you have the upper and lower bracket meeting attach the two items with the provided carriage bolts and serrated flange nuts. Fully tighten all hardware.

Now install the Light of your choice to the bracket. Follow light instructions to properly install.

