



INSTALL TIME: 30 mins



**1**

## **GET ORGANIZED**

you will need:

- a number 10 and 13 wrench

...CONT'D


### **IMPORTANT WARNING!**

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.

**1****GET ORGANISED**

...CONT'D

Here is what you will receive with your kit...

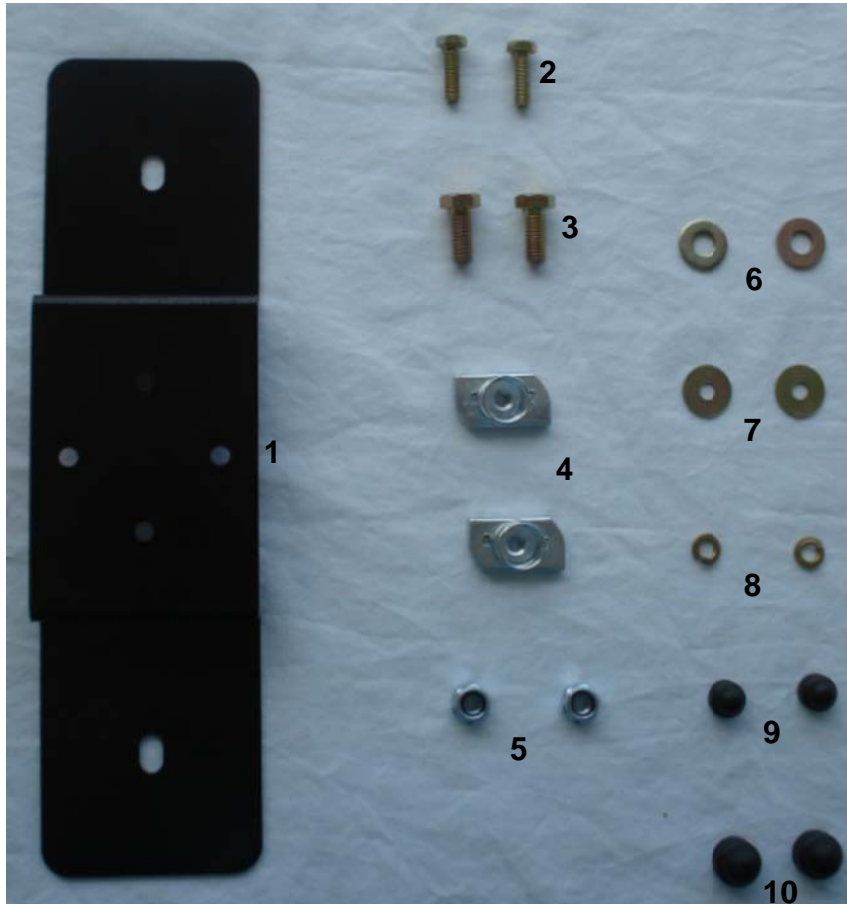


1. 4 x Mounting brackets
2. 8 x M6 x 20 bolts
3. 8 x M8 x 20 bolts
4. 8 x M6 Spring nuts
5. 8 x M8 Nylocks
6. 8 x M8 washers
7. 8 x M6 washers
8. 8 x M6 Spring washers
9. 8 x M6 Plastic caps
10. 8 x M8 Plastic caps

**A)**

Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Grab a cup of coffee and take a moment. A little prep now may save you a lot of time later

## 2

## MOUNTING YOUR BRACKETS

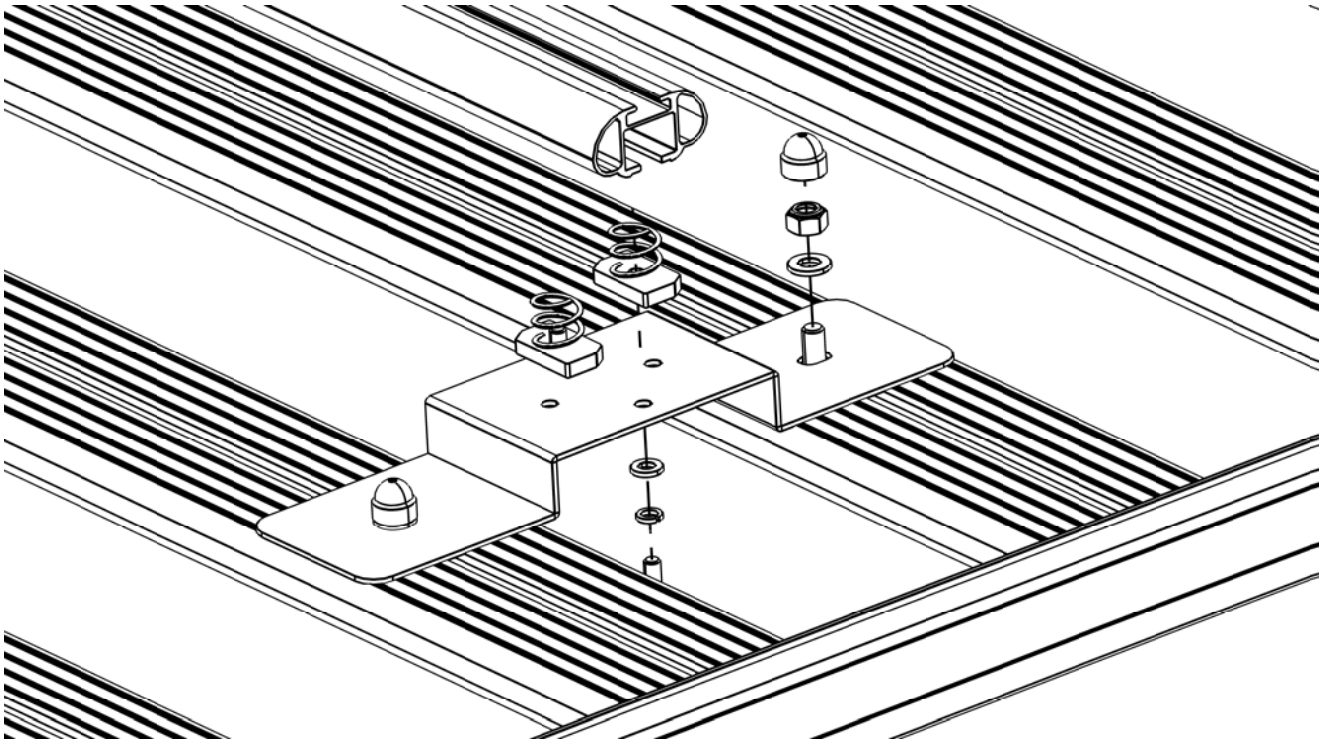

A)

The brackets are designed so that they can be mounted in many orientations to suit your need. They can be mounted parallel with a slat or bridge across slats. They can also be mounted on top or below the slat, depending on your personal preference.

B)

Slide an M8 bolts into the aluminum slats T-slot, on the slat which you intent securing your Thule extrusion. The head of the bolt can now slide up and down the slot. Bridge across two slats for the best support. Drop the bracket onto the bolts and fasten with the M8 washer and nyloc nut.

From the bottom of the bracket push through the M6 bolt with an M6 washer, and spring washer. Ensure the spring washer is seated between the bolts and the washer. Fasten with the M6 spring nut on the opposite side of the bracket.

C)

Slide the Thule aluminum extrusion onto the spring nuts from the under side of the rack and fasten the M6 bolts using your number 10 wrench. You can now add the plastic caps to the M6 bolts

Space and orient your brackets to suit your Thule Extrusion.

## **4 CHECK FOR OTHER COOL ACCESSORIES**

Now's the time to take a trip to your dealer or visit  
[www.FRONTRUNNER.CO.ZA](http://www.FRONTRUNNER.CO.ZA)

## **5 TAKE A TRIP**

A)

After your first adventure, check the tension on all the bolts and screws and re-tighten where needed. You'll find a small amount of settling has happened.

B)

Go on many more adventures. Periodically check the bolts- it's always wise to double check your fasteners once in a while.

➡ **Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.**

© 2011 Front Runner Outfitters, Inc.